



Phone Operating Instructions



Globalstar GSP 1600 Satellite Phone

For Use In: Worldwide

Basic Operation

You must be outside in direct line-of-sight of an expanse of sky for service to connect with a satellite (connection may be possible through a large window if sufficient sky is visible or with the use of an external mount antenna). Turn and extend antenna, then press the POWER button.

Placing a call

- Once you see the “i” icon appear in the upper right side display after turning the phone on, you are now ready to make your call using Standard North American Dialing.
- If placing a call from within the US, simply dial 1 then area code and number.
- If placing a call from outside the US, press and hold the 0 key until the + sign appears, then enter country code (for the US dial 1) area code and number.
- Press the SEND key to place the call
- Press the END key to terminate the call

Cellular Express Phone Rentals, Inc.
Shipping & Receiving
34 E. Palisade Avenue
Englewood, NJ 07631

T: 800.320.7776 or 201-541-4191
F: 800-741-4101
E: info@ CellularPhoneRentals.com
CellularPhoneRentals.com

Receiving an incoming call

- In order to receive an incoming call, the antenna must be extended with an unobstructed view of the sky and you must have a good connection with the satellite.
- Caller dials 1 then the 10 digit Globalstar number
- To answer an incoming call, simply press the SEND key, to terminate the call press the END key.

Voice Mail

You will be notified of a voice message waiting by the 'envelope' icon.

- Dial your Globalstar satellite number (if calling from outside the US press and hold 0 key for + sign, then dial 1 and number)
- When you hear the greeting, press "1"
- Enter personal password (last four digits of satellite number)