

Phone Operating Instructions



Nokia 6650 Japan Cell Phone

For Use In: Japan ONLY	
Basic Operation:	
• Turn On/Off:	Press and hold red button on top of phone
• To place a call:	Enter number then press green button
• To end a call:	Press red button
• To answer a call:	Press green button
• Receive US based call:	Caller dials 1 then your mobile number
• Receive Int'l based call:	Caller dials 001 then your mobile number
• To call within Japan:	Use Japan's local dial procedure
• To call to another country:	Press * key twice until + appears, then enter country code and number.
• To call the US:	Dial + 1 then area code and number
• To call another Cellular Express rental phone:	Dial + 1 then mobile number
• Signal level:	View left side LCD meter
• Battery level:	View right side LCD meter
• Volume level:	Volume keys on left side of phone

Basic Info:	
<ul style="list-style-type: none"> • Weight: 141 g (with Li-Ion battery) • Dimensions: 133 x 52 x 25 mm, 123 cc • WCDMA and GSM 900/1800 networks; automatic switching between systems and modes • Talk Time - Up to 2h - 3h 10min (WCDMA) Up to 3h 10min - 4h 20min (GSM) • Stand By - 7 - 14 days • Charging Time - Approximately 2 hours 	

Features:

- Modes: GSM 1900 / WCDMA 1900
- Weight 4.90 oz (139 g)
- Dimensions 5.24" x 2.04" x 1.02" (133 x 52 x 26 mm)
- Battery Type Lilon - 1000 mAh
- Display Type: LCD (Color)
- Colors: 4096 (12-bit)
- Size: 128 x 160 pixels
- Calendar & Phone book
- Speed dial
- External caller ID
- Alarm clock
- Games & Calculator

Voice Mail

To Access Your Voice Mailbox:

You will be notified of a voice mail message by the envelope icon on the screen display.

- Press * key twice until + sign appears, then enter 1 and your mobile number, then press the 'send' key
- When you hear your greeting, press the * key
- You will then be prompted for your password

*(if you are asked to enter the mobile number you are trying to reach, enter your mobile number again, and then press the * key)*

- Your Password is the last four digits of phone number
- Press 1 to review messages

Procedure to manually select overseas GSM carrier

(If phone does not connect with network automatically)

- Press Menu
- Press the down arrow until Settings is highlighted and press select
- Use the up/down arrow buttons to highlight Phone Settings and press select
- Use the up/down arrow buttons to highlight System Mode and press select
- Use the up/down arrow buttons to select Dual System or WCDMA 3G and press select.

Phone will display *Searching for Network* as it searches for available carriers. Once the networks are chosen the screen may display the names of available carriers, if so, scroll to a carrier which was not automatically selected by the phone originally, then press Select. If there is only one carrier, the phone will automatically connect with that network.