



Phone Operating Instructions



Motorola V600/V180/V188 International Cell Phone With European Phone Number

For Use In: Europe, Asia, Central & South America, Mexico, Middle East, Australia, South Africa	
Basic Operation:	
• Turn On/Off:	Press and hold End button
• To answer a call:	Press Send button or open flip
• To end call:	Press End button or close flip
• To receive US based call:	Caller dials 011 44 then your mobile number
• To receive foreign based call:	Caller dials 00 44 then your mobile number
• To receive UK based call:	Caller dials 0 then your mobile number
• To call the US:	Press and hold 0 until + appears then dial 1, area code and number, then Send. Call will authenticate, main screen will appear and cell phone will ring back within a few seconds, then press Send again.
• To call locally or to another country.	Press and hold 0 until + appears, then enter country code and number, then Send, after cell phone ring-back, press Send again.
• To call another Cellular Express rental phone	Dial + 44 mobile number then Send, after cell phone ring-back, press Send again.
• Signal level:	View left side LCD meter
• Battery level:	View right side LCD meter
• Volume level:	Volume keys on left side of phone

Basic Info:

- Manufacturer Motorola
- Model V600
- Size 3.46 x 1.85 x .91 inches
- Weight 4.4 oz
- Talk Time 6.5 hours
- Stand By Time 7 days

Motorola V600 features:

- Camera
- Speakerphone
- MegaTones®, Wallpaper, HiFi Ringers™, & Games
- Vibrating alert
- Voice dialing
- Predictive text input for easy messaging
- Calendar
- Phone book
- Speed dial
- External caller ID
- Alarm clock / Games / Calculator

Voice Mail**To Access Your Voice Mailbox:**

You will be notified of a voice mail message via text message.

- Dial 121 then Send, after cell phone ring-back, press Send again.
- Voice prompts will guide you to play, skip, save and delete msg.

Procedure to manually select overseas GSM carrier

(If phone does not connect with network automatically)

- Press Menu (center top button)
- Scroll to Settings, press Select
- Scroll to Network, press Select
- Scroll to Network Setup, press Select
- Scroll to Band, press Change
- The phone should be defaulted to 900/1800, if not scroll to 900/1800, press Select.
Phone will then search for correct network, then press Done.
(Argentina & Chile however should be on 1900)

Phone will display *Searching for Network* as it searches for available carriers. Once the networks are chosen the screen may display the names of available carriers, if so, scroll to a carrier which was not automatically selected by the phone originally, then press Select. If there is only one carrier, the phone will automatically connect with that network.